

FULLSAC PERFORMANCE

Lake Havasu, AZ

www.fullsac.com

928-505-2912

Installation Instructions – CVO Power Cores

Step 1 – Remove mufflers and end caps. The stock cores are held in place by 2 spot welds. Grind through these releasing the stock cores.

Step 2 – With a little tap from the inlet end, they will slide out.

Step 3 – Your new FULLSAC cores are held in place by $\frac{1}{4}$ " bolt. Drill a $\frac{1}{4}$ " hole through the bottom of the muffler 1 $\frac{1}{2}$ " from the end of the muffler.

Step 4 – Slide the new cores in while looking through them to find the center at the inlet end. Line up the hole and use the hardware provided. DO NOT OVER TIGHTEN.


Enjoy your new sound and performance!!!



Step 1



Step 2

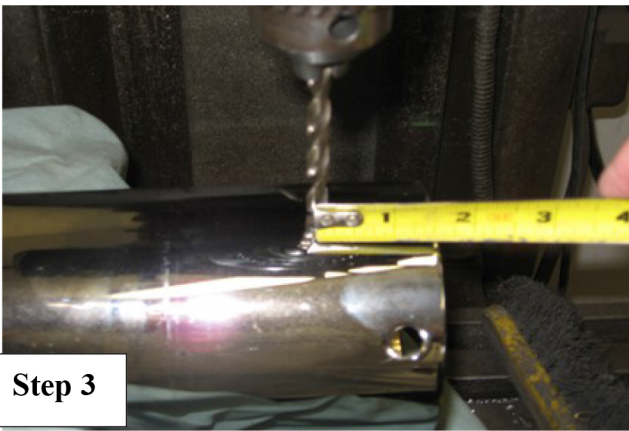

Step 3



Step 4